



Spare parts sketch – part 1

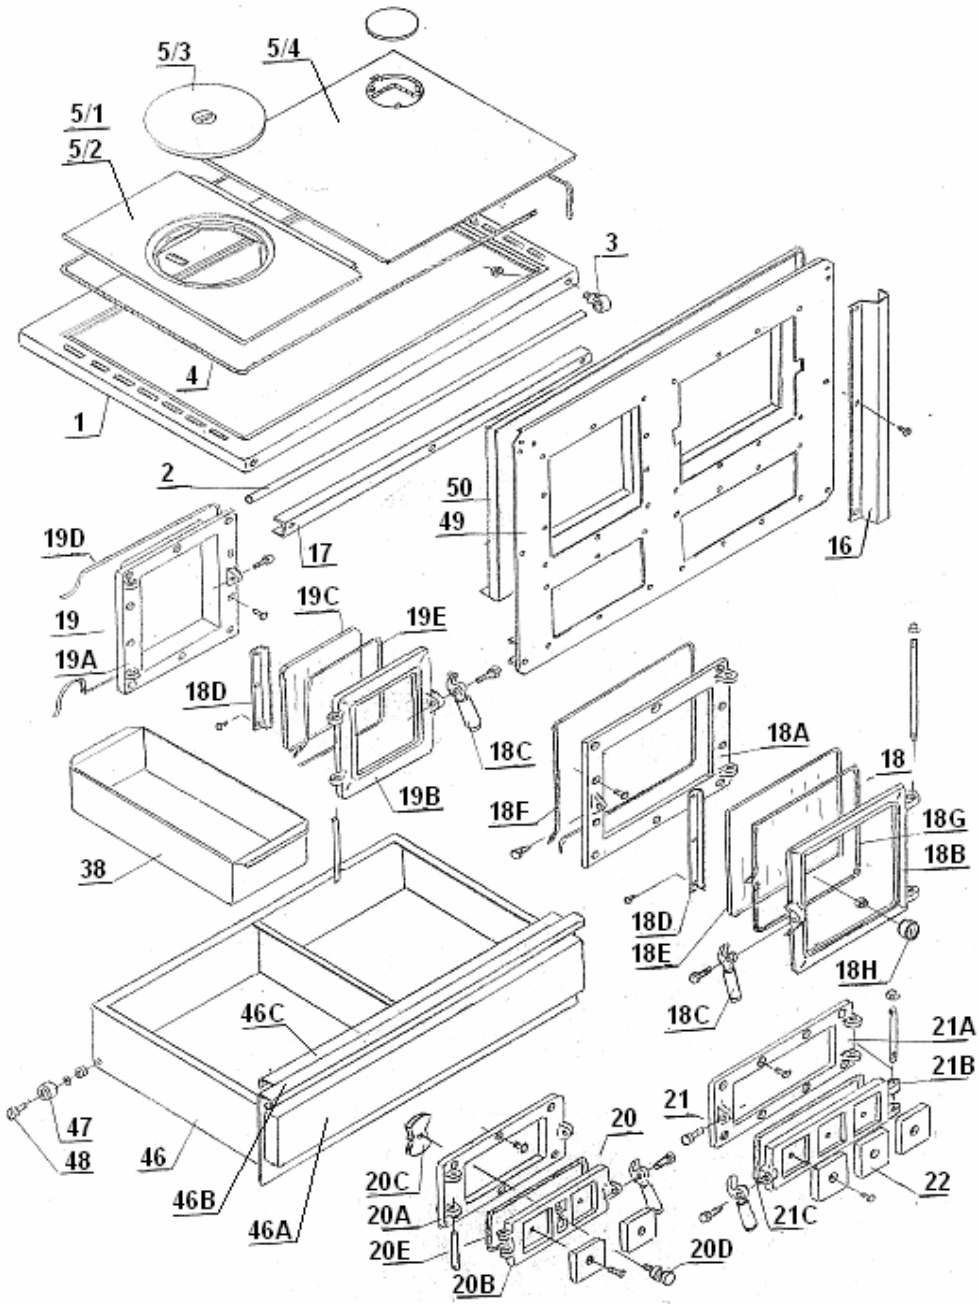

Spare parts sketch – part 2

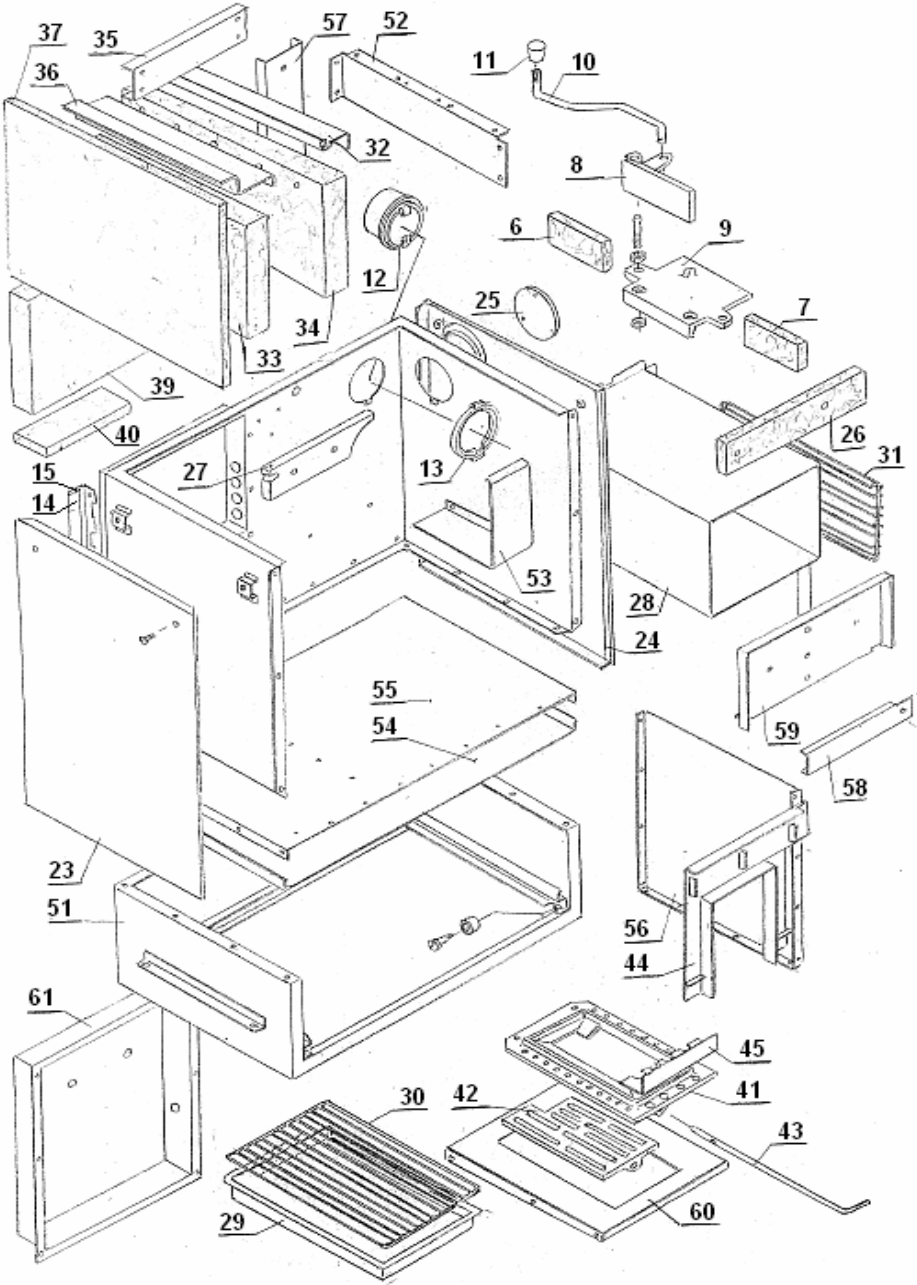

Spare parts list

001	Hob Top set	024	Side panel with chimney outlet
002	Pipe I. set	025	Chimney outlet cover
003	Holder I. set	026	Insulation I.
004	Insulation cord Ø8,5 (2,65m)	027	Insulation II.
005/1	Hob top set (steel)	028	Oven
005/2	Hob top I. (cast iron)	029	Pan
005/3	Hob top circle lid (cast iron)	030	Baking oven grate
005/4	Hob top II. (steel)	031	Baking oven grate strut
006	Chamotte part 7 (Chamotte flap)	032	Sheet metal, set
007	Chamotte flap	033	Side chamotte panel
008	Smoke Flap	034	Side chamotte panel
009	Base for Oven Heating Controller (cast iron)	035	Rear top sheet
010	Oven heating control pull	036	Said top sheet
011	Top roll	037	Insulation
012	Circlet collet (cast iron)	038	Ash receiver
013	Circlet	039	Chamotte rear panel, set
014	Ribbon	040	Chamotte lower panel
015	Plug (plastic)	041	Grate bearing
016	Ribbon 2	042	Rotatable grate
017	Cover strip	043	Grate bar
018	Oven door with frame	044	Frame, set
018A	Oven door frame	045	Barrier
018B	Oven door	046	Drawer, set
018C	Closing hook, set	046A	Drawer front panel
018D	Glass holder	046B	Drawer handle
018E	Oven door glass panel	046C	Drawer ribbon
018F	Insulation cord Ø8 (1,2m)	047	Drawer caster
018G	Insulation cord Ø3 (1m)	048	Drawer caster pin
018H	Thermometer		
019	Combustion chamber door with frame		
019A	Combustion chamber frame		
019B	Combustion chamber door		
019C	Combustion chamber door glass panel		
019D	Insulation cord Ø8 (0,8m)		
019E	Insulation cord Ø3 (0,85m)		
020	Ash chamber door with frame		
020A	Ash chamber door frame		
020B	Ash chamber door		
020C	Air rose		
020D	Air rose handle		
020E	Insulation cord Ø8 (0,73m)		
021	Sweeping door with frame		
021A	Sweeping door frame		
021B	Sweeping door		
021C	Insulation cord Ø8 (0,86m)		
022	Plate		
023	Side panel		